

Materials:

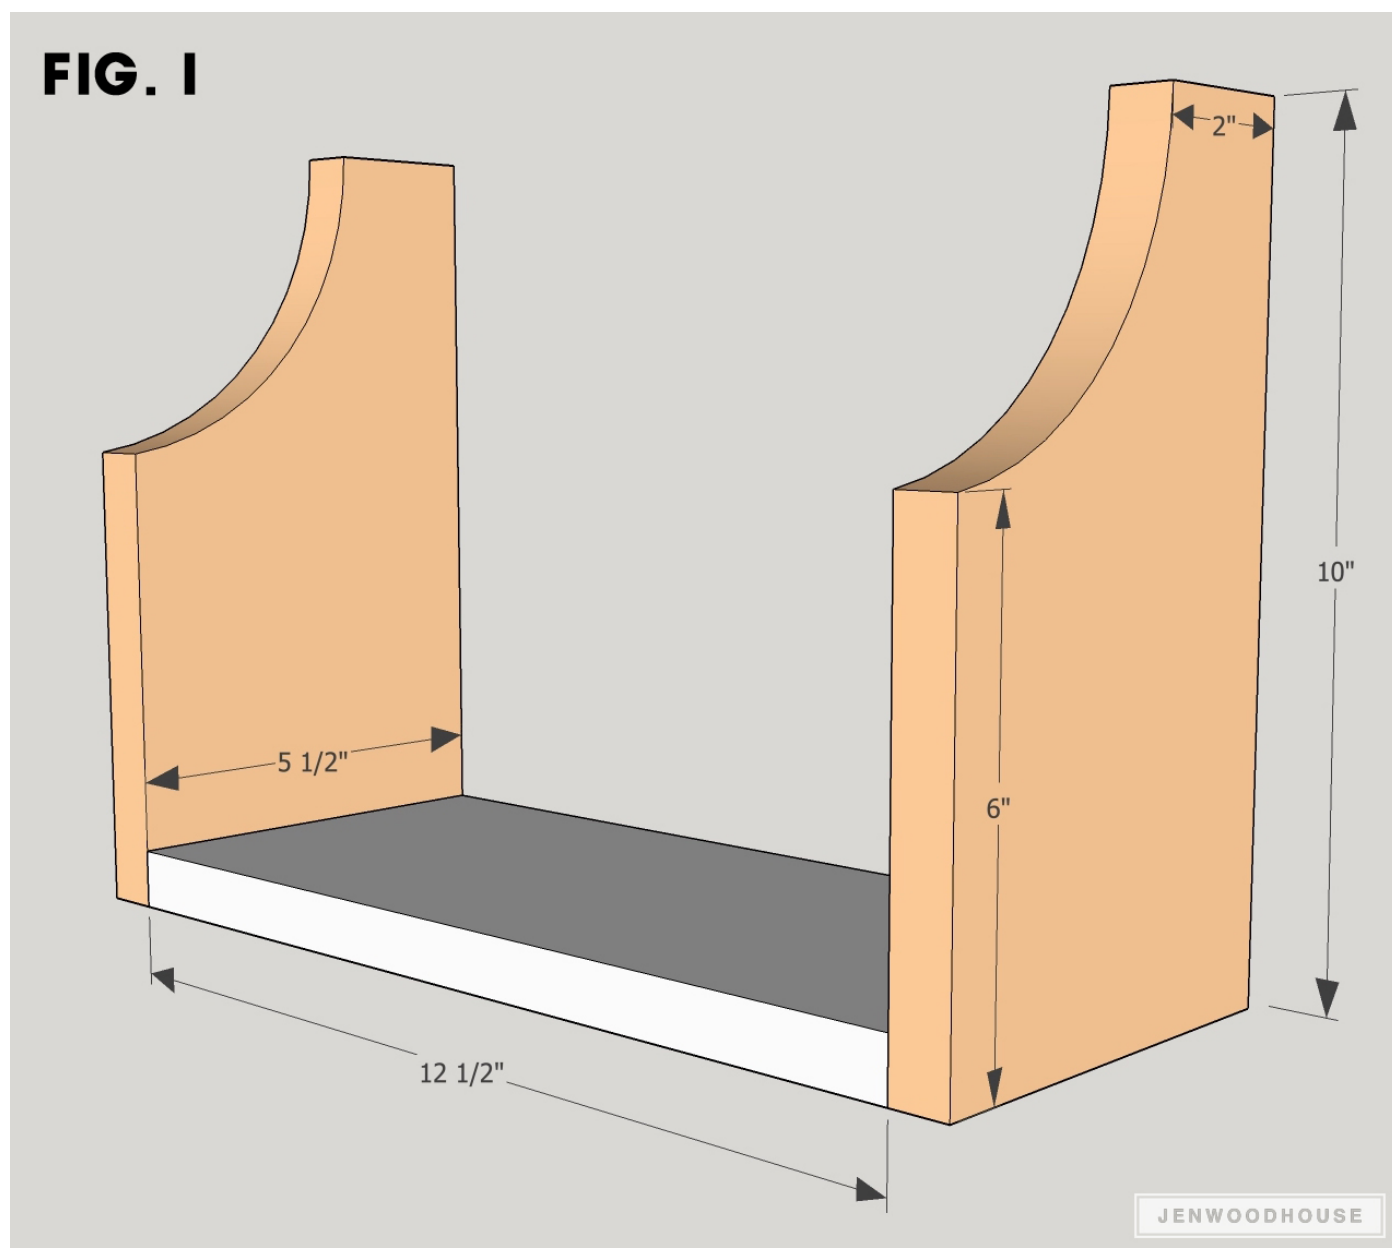
- Scrap $\frac{3}{4}$ -inch Plywood (at least a 20" x 15" piece)
- Scrap $\frac{1}{4}$ -inch Plywood (at least a 10" x 15" piece)
- 1 $\frac{1}{4}$ -inch Brad Nails
- 1-inch Brad Nails
- Wood Glue
- Wood Filler

Tools:

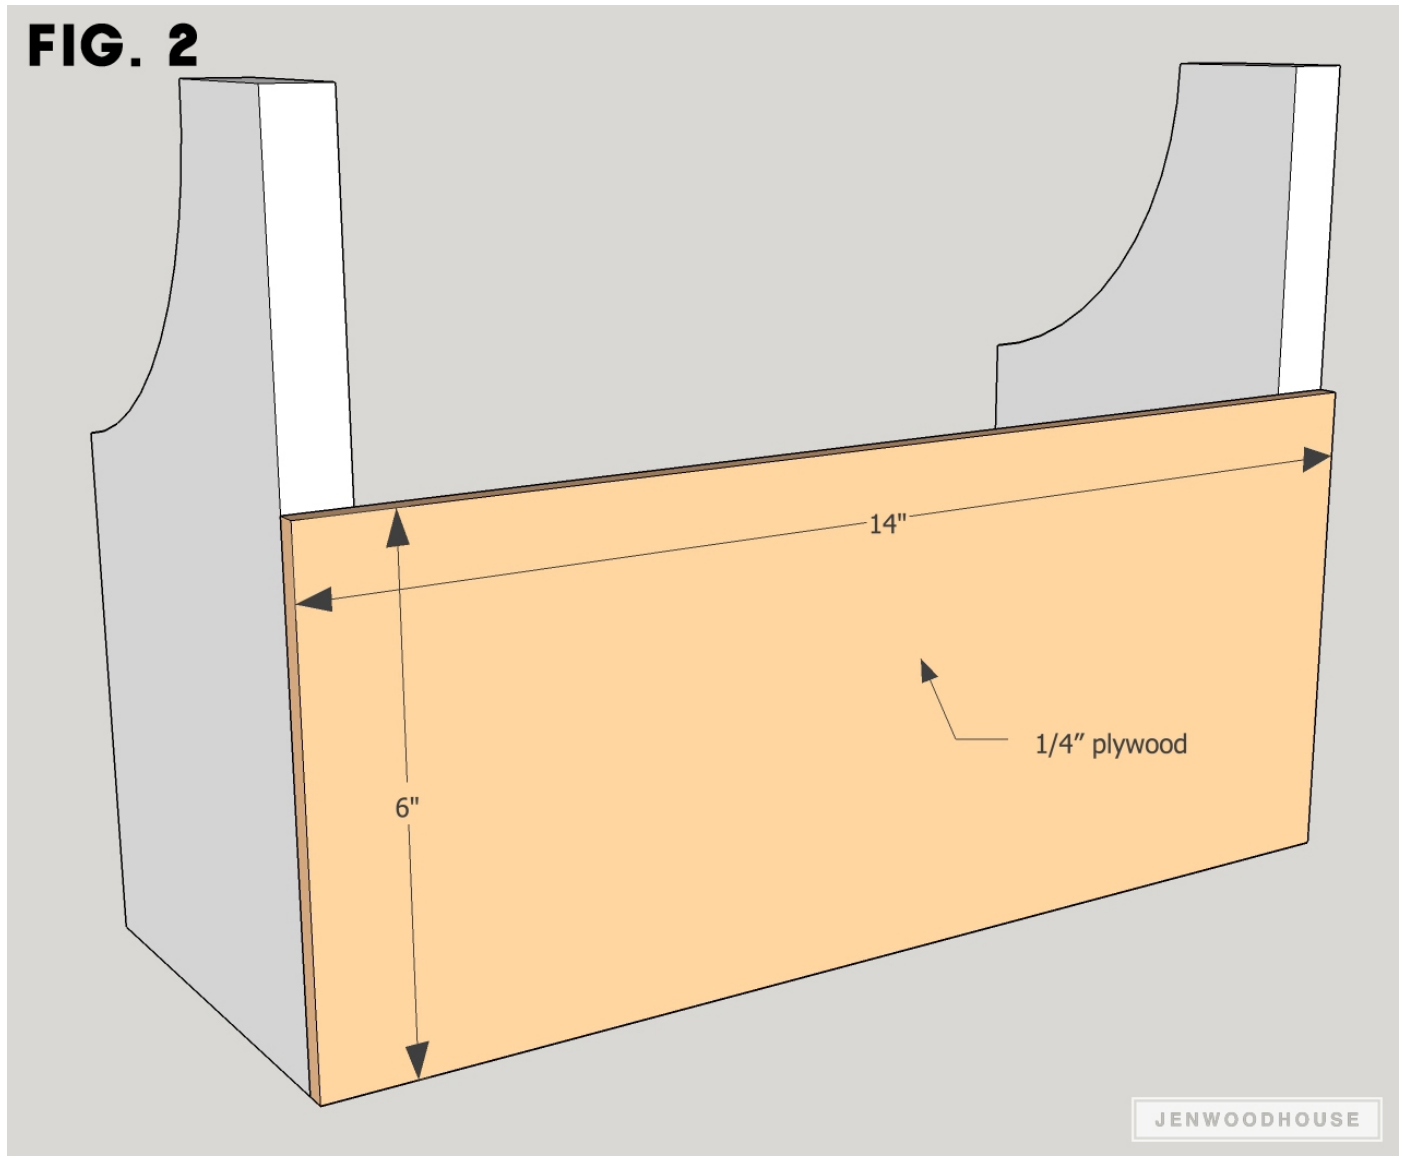
- Tape Measure
- Pencil
- Carpenter's Square
- Table Saw
- Jig Saw
- Brad Nailer or Hammer

Cut List:

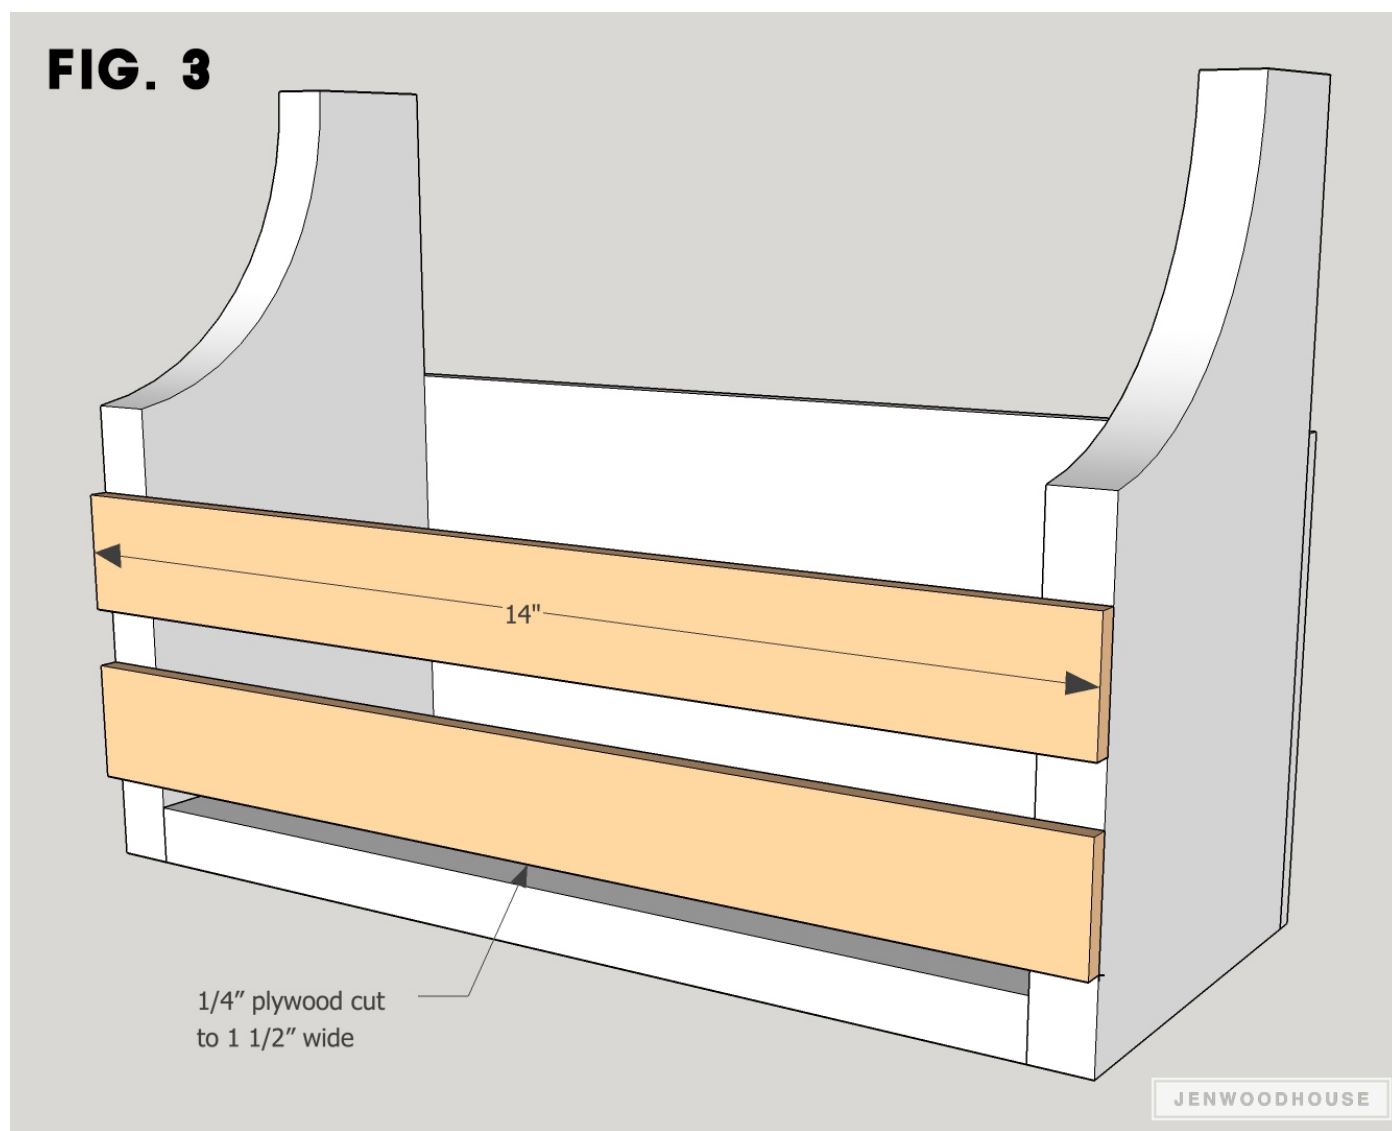
- (2) $\frac{3}{4}$ -inch plywood @ 10 inches x 5 $\frac{1}{2}$ inches (sides)
- (1) $\frac{3}{4}$ -inch plywood @ 12 $\frac{1}{2}$ inches x 5 $\frac{1}{2}$ inches (bottom)
- (1) $\frac{1}{4}$ -inch plywood @ 14 inches x 6 inches (back)
- (2) $\frac{1}{4}$ -inch plywood @ 14 inches x 1 $\frac{1}{2}$ inches (front slats)

**STEP 1 - BUILD THE TWO SIDES**

Measure, mark, and cut sides and bottom to size. Use a jigsaw to cut the curve in the sides. Attach the sides to the bottom with 1 1/4-inch brad nails and wood glue.

**STEP 2 – ATTACH THE BACK**

Measure, mark, and cut back to size. Attach as shown with 1-inch brad nails and wood glue.



STEP 3 – ATTACH THE FRONT SLATS

Measure, mark, and cut front slats to size. Attach as shown with 1-inch brad nails and wood glue.

Fill nail holes, sand, stain and/or paint, and finish as desired.

Attach [bunk bed ladder hooks](#) to the back with screws.