

VINYL RECORD STORAGE



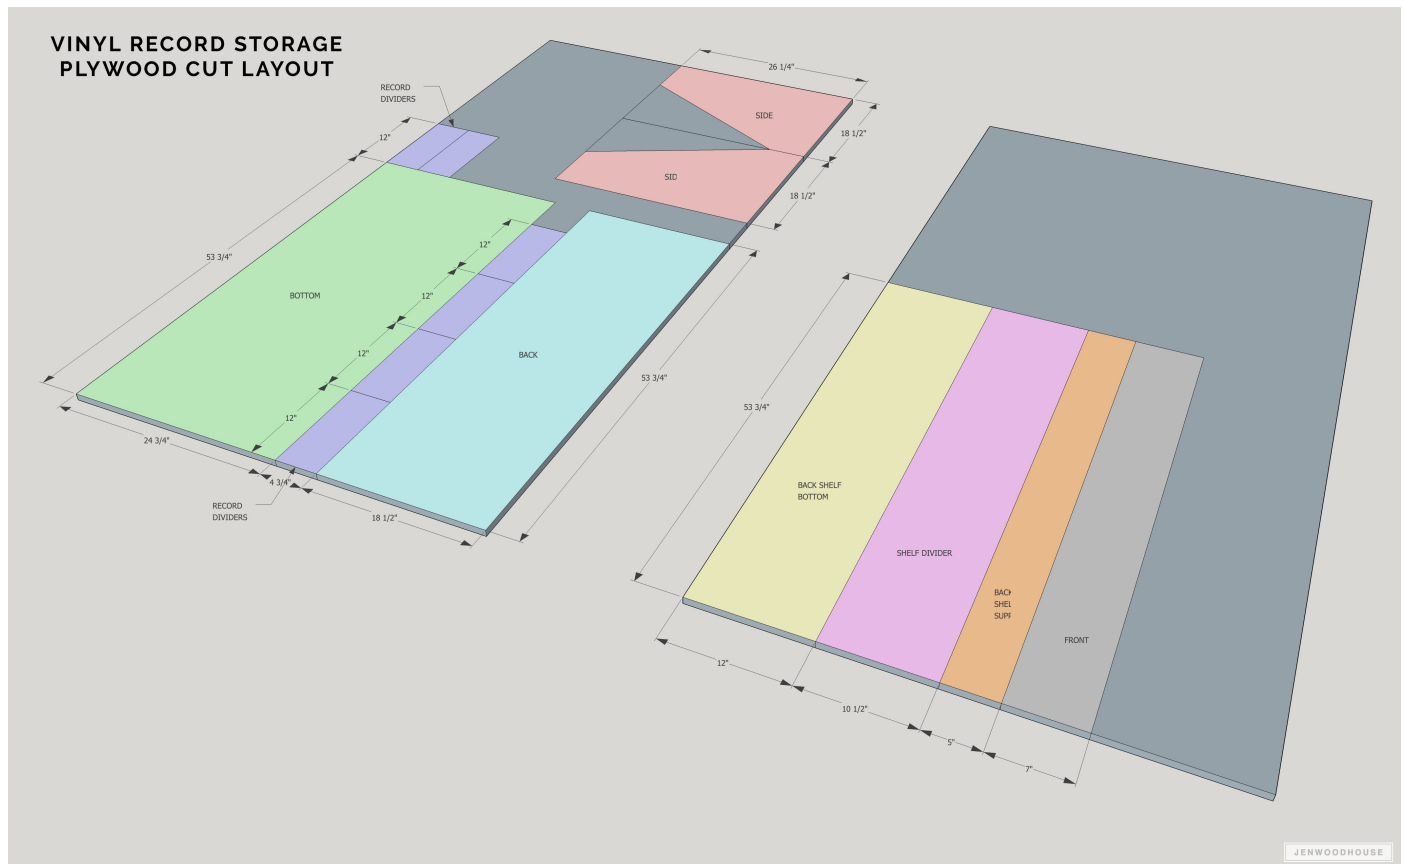
JENWOODHOUSE

MATERIALS:

- (2) 4 x 8 Ft. Sheets of $\frac{3}{4}$ -inch Plywood
- (3) 2 x 2 x 8 Ft. Boards
- (4) Steel Hairpin Legs
- 1 $\frac{1}{4}$ -inch Pocket Screws
- 1 $\frac{1}{4}$ -inch Brad Nails
- 2-inch Wood Screws
- Wood Glue
- Wood Filler

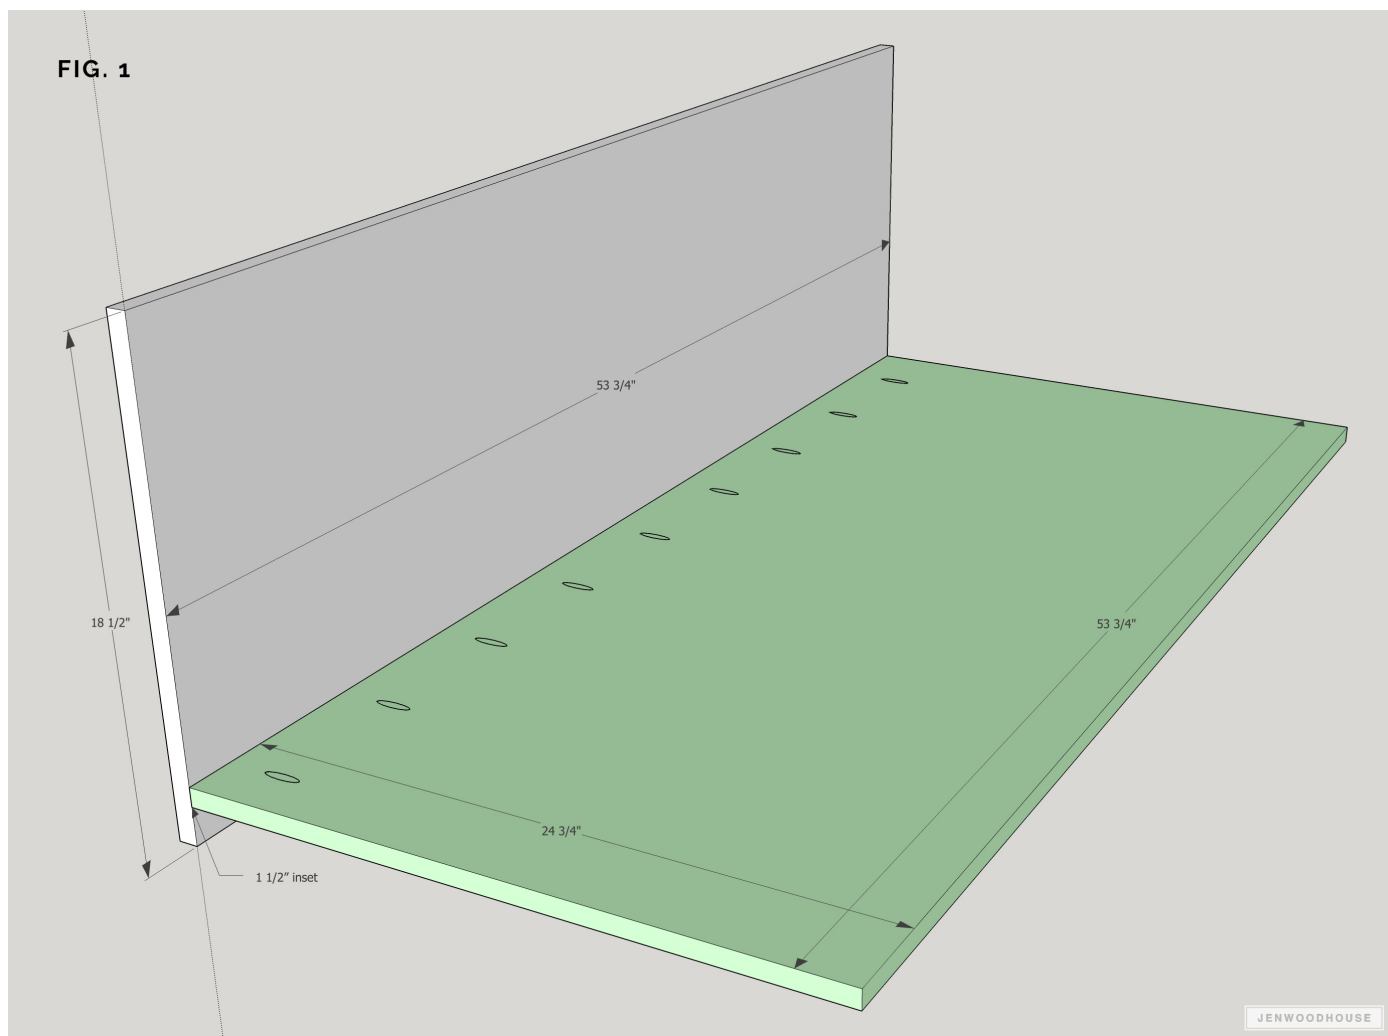
TOOLS:

- Tape Measure
- Pencil
- Carpenter's Square
- Drill
- Circular Saw
- Pocket Hole Jig
- Brad Nailer or Hammer
- Safety Glasses
- Hearing Protection
- Dust Mask



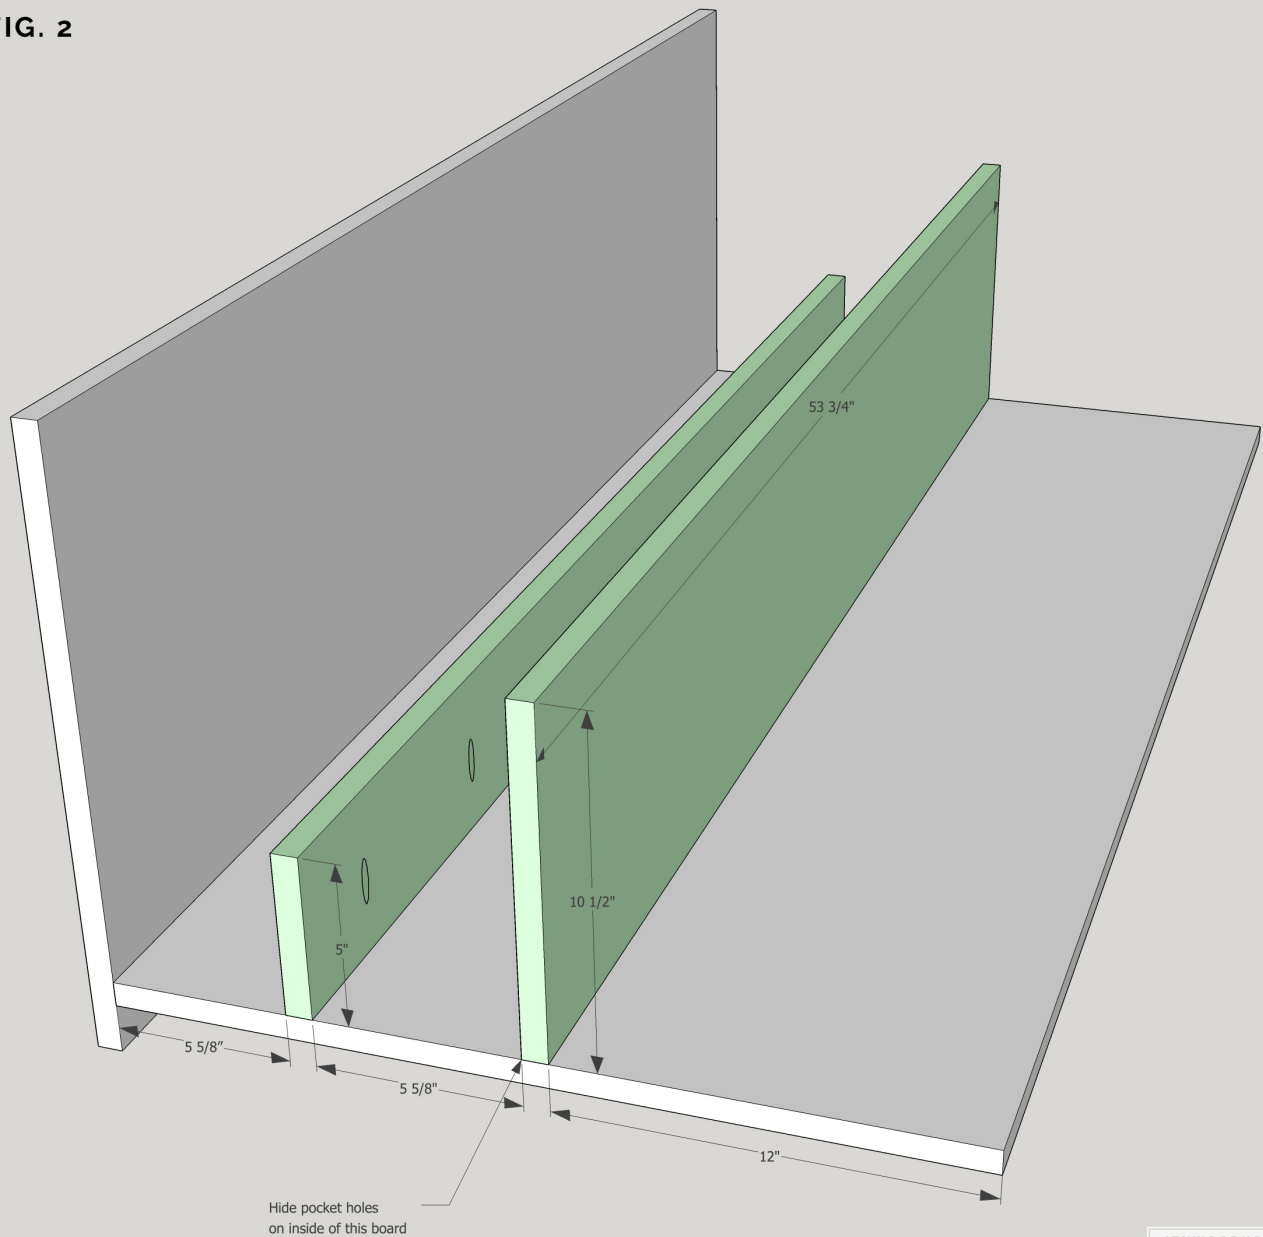
CUT LIST:

- (1) $\frac{3}{4}$ -inch plywood @ 53 $\frac{3}{4}$ inches x 24 $\frac{3}{4}$ inches (bottom)
- (1) $\frac{3}{4}$ -inch plywood @ 53 $\frac{3}{4}$ inches x 18 $\frac{1}{2}$ inches (back)
- (1) $\frac{3}{4}$ -inch plywood @ 53 $\frac{3}{4}$ inches x 12 inches (back shelf bottom)
- (1) $\frac{3}{4}$ -inch plywood @ 53 $\frac{3}{4}$ inches x 5 inches (back shelf support)
- (1) $\frac{3}{4}$ -inch plywood @ 53 $\frac{3}{4}$ inches x 10 $\frac{1}{2}$ inches (shelf divider)
- (6) $\frac{3}{4}$ -inch plywood @ 12 inches x 4 $\frac{3}{4}$ inches (record dividers)
- (2) $\frac{3}{4}$ -inch plywood @ 26 $\frac{1}{4}$ inches x 18 $\frac{1}{2}$ inches (sides)
- (1) $\frac{3}{4}$ inch plywood @ 53 $\frac{3}{4}$ inches x 7 inches (front)



STEP 1

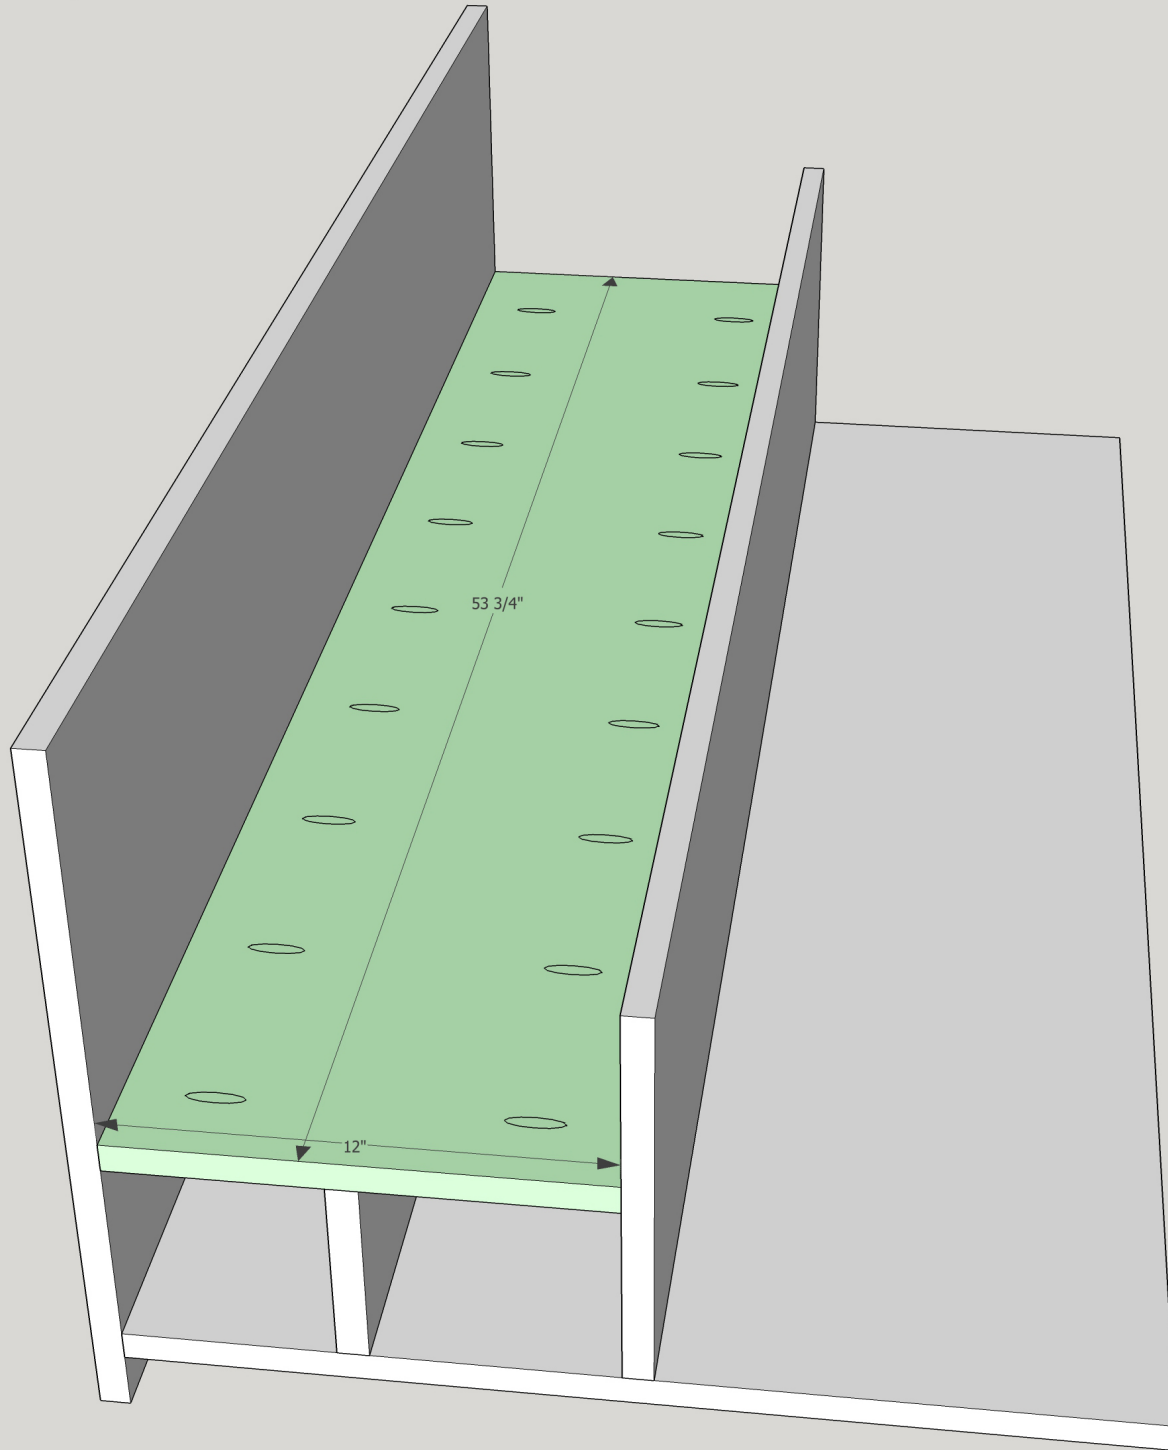
Measure, mark, and cut back and bottom panels to size. Drill $\frac{3}{4}$ -inch pocket holes as shown. Position the bottom panel 1 $\frac{1}{2}$ inches from the bottom edge of the back panel and attach with 1 $\frac{1}{4}$ -inch pocket screws and wood glue. **Tip: place a couple of the 2x2 boards underneath the bottom panel to prop it up 1 $\frac{1}{2}$ inches. This will make it easier to position as you're driving in the screws.*

FIG. 2

JENWOODHOUSE

STEP 2

Measure, mark, and cut back shelf support and divider to size. Drill $\frac{3}{4}$ -inch pocket holes as shown (pocket holes are drilled on the backside of the shelf divider) and attach the back shelf support and shelf divider to the bottom panel with 1 $\frac{1}{4}$ -inch pocket screws and wood glue.

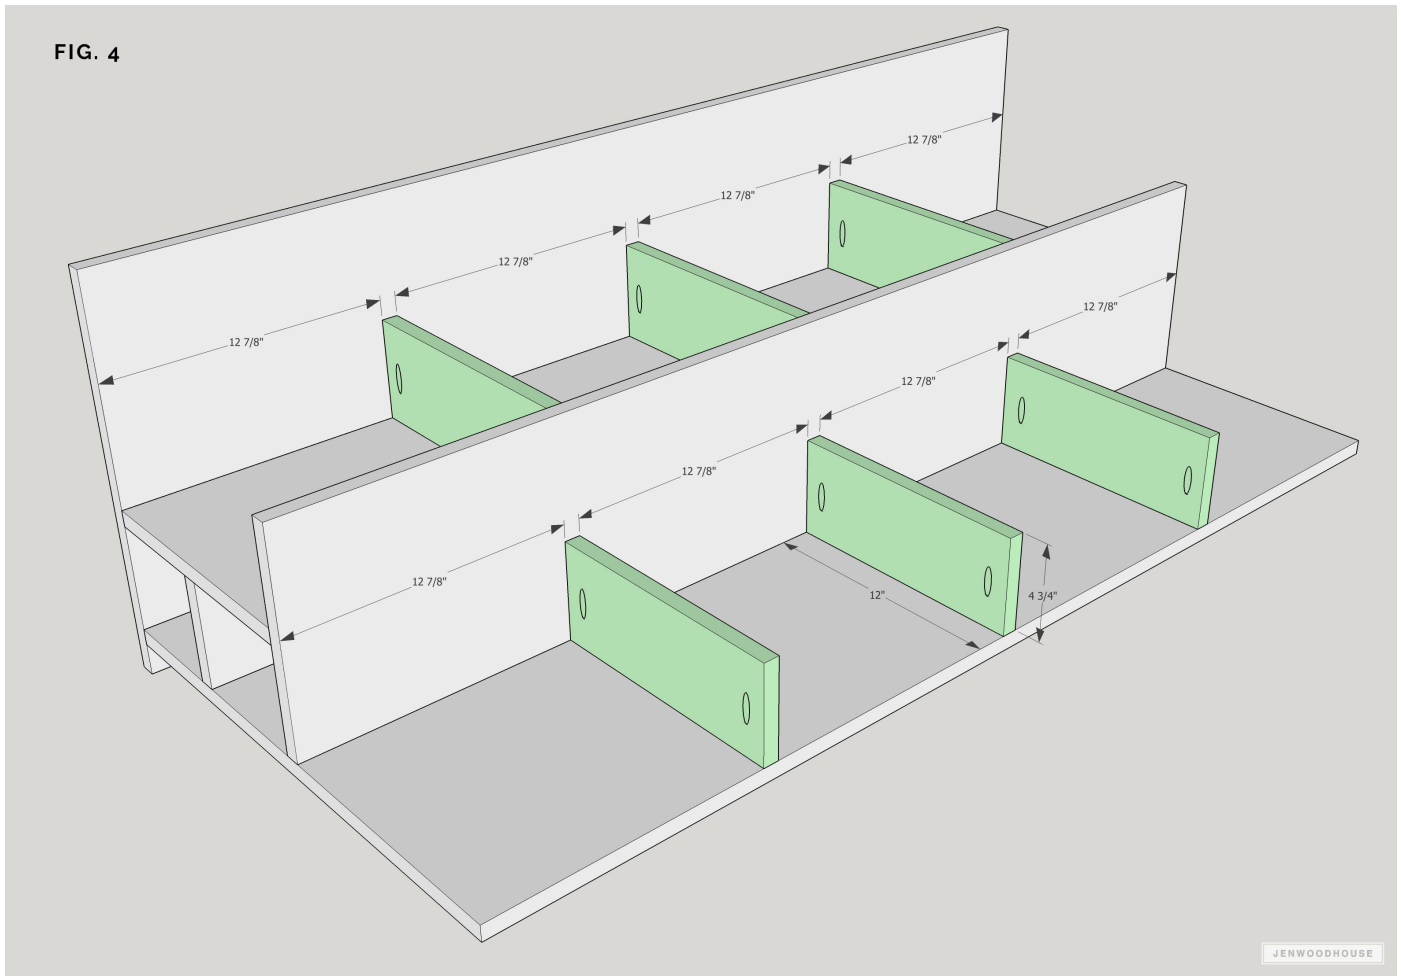
FIG. 3

JENWOODHOUSE

STEP 3

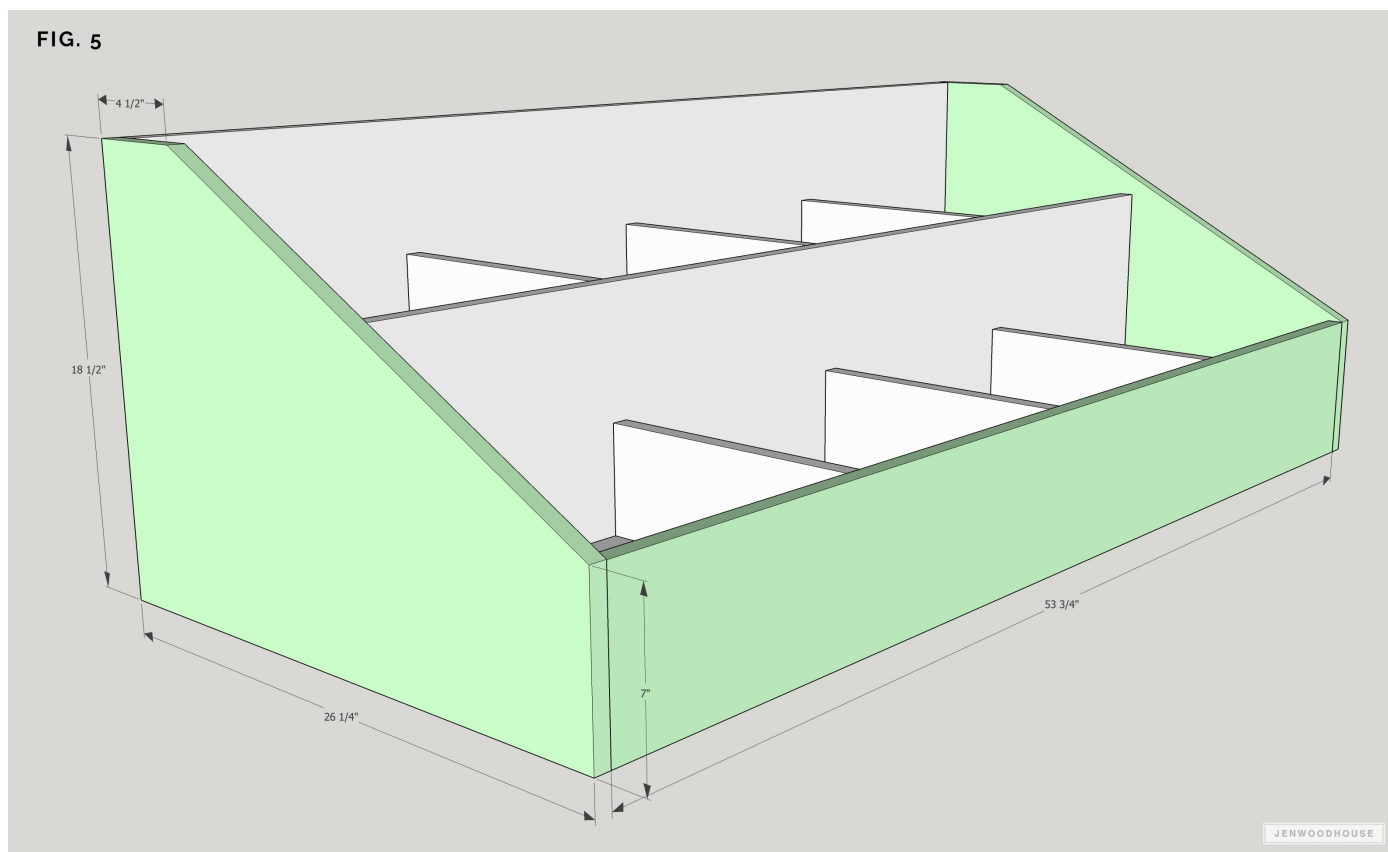
Measure, mark, and cut back shelf bottom to size. Drill $\frac{3}{4}$ -inch pocket holes as shown and attach the back shelf bottom to the back panel and shelf divider with 1 $\frac{1}{4}$ -inch pocket screws and wood glue.

FIG. 4

**STEP 4**

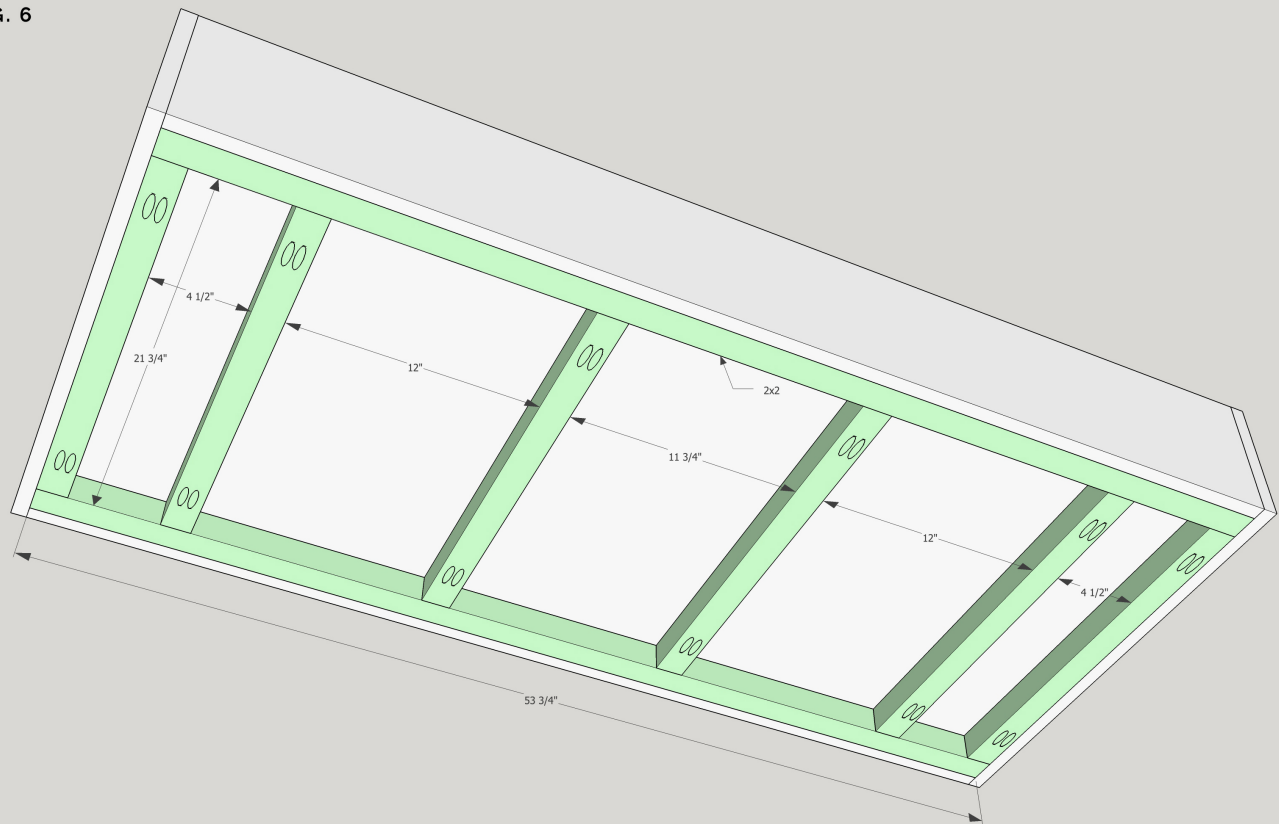
Measure, mark, and cut dividers to size. Drill $\frac{3}{4}$ -inch pocket holes as shown and attach with 1 $\frac{1}{4}$ -inch pocket screws and wood glue.

FIG. 5

**STEP 5**

Measure, mark, and cut sides and front to size. Attach with 1 $\frac{1}{4}$ -inch brad nails and wood glue.

FIG. 6

**STEP 6**

Measure, mark, and cut 2x2 boards to length. Drill 1 1/2-inch pocket holes as shown and construct the frame using 2 1/2-inch pocket screws and wood glue. Attach the constructed frame to the cabinet with 2-inch wood screws and wood glue.

Fill screw and nail holes with wood filler, sand, stain and/or paint, and finish as desired. Finally, screw on steel hairpin legs.