

WALL-MOUNTED BAR CABINET

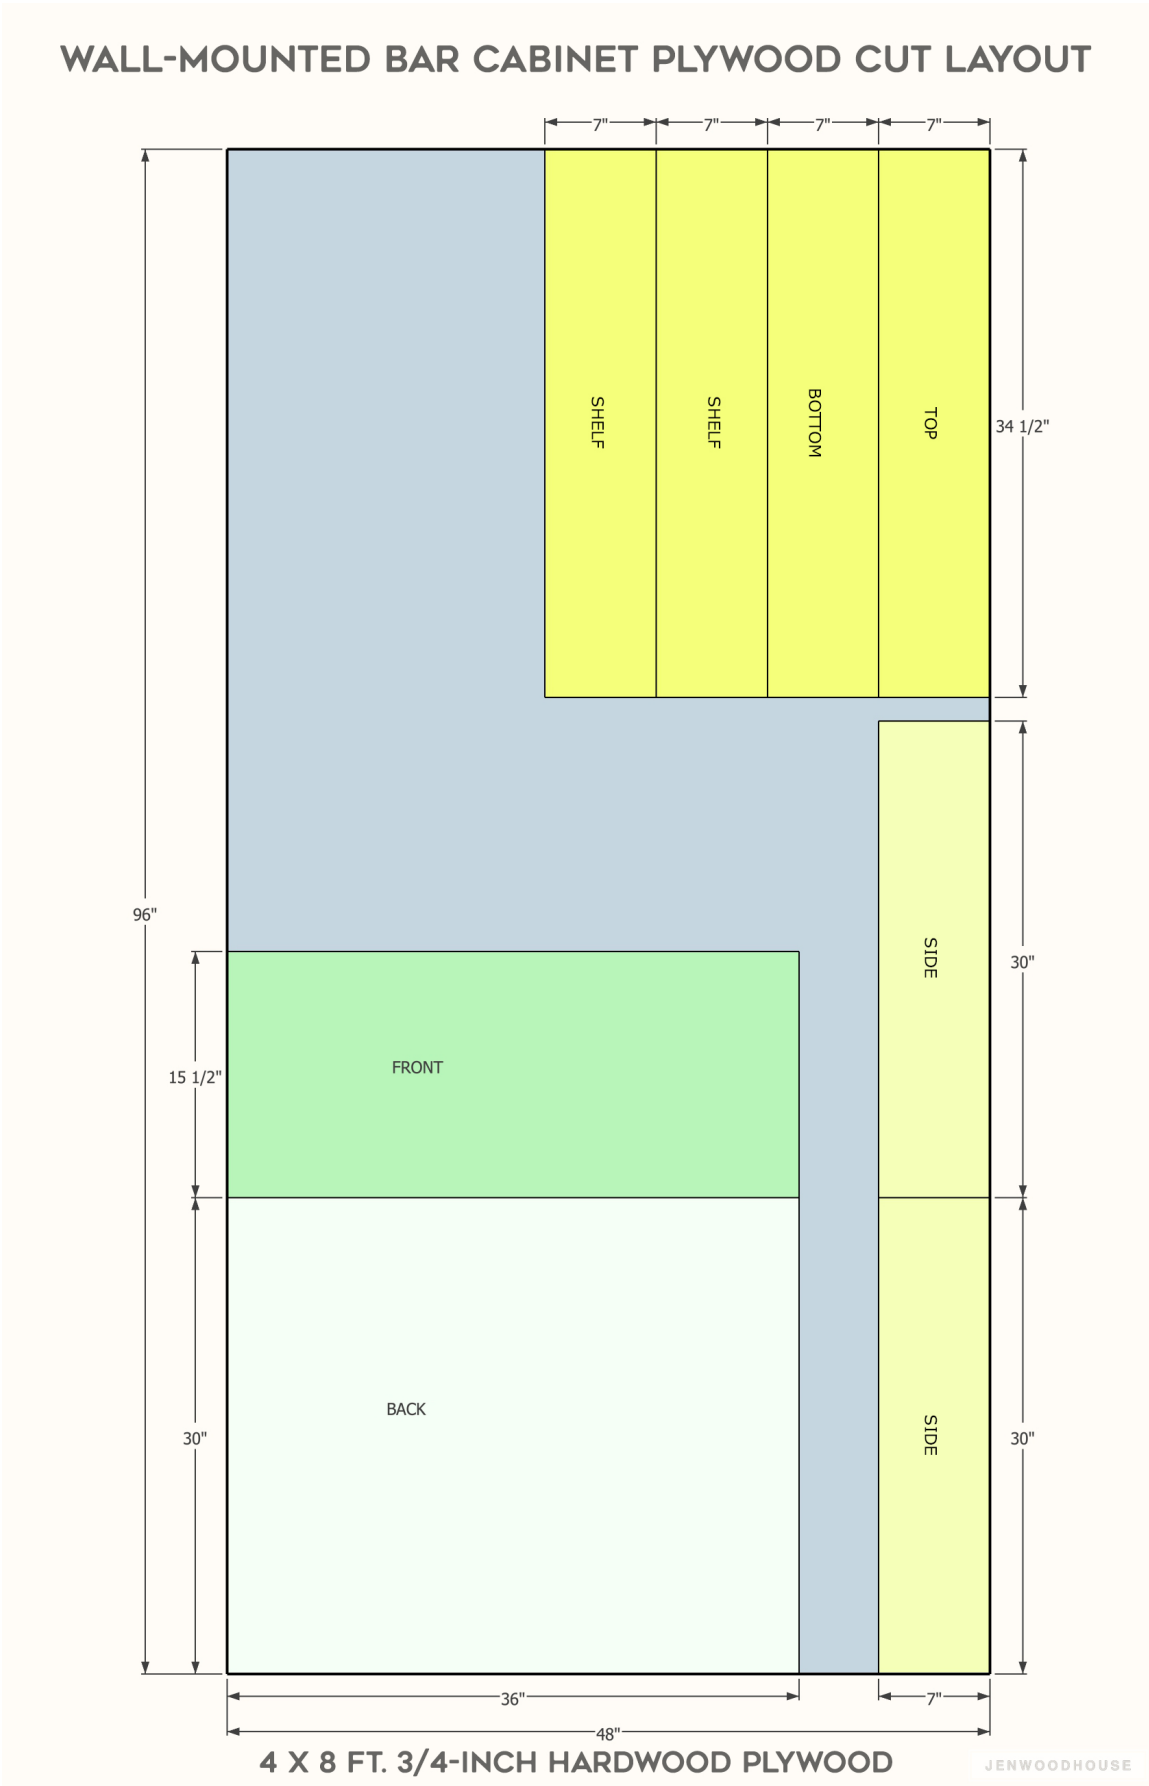


MATERIALS:

- (1) 4 x 8 Ft. Sheet of ¾-inch PureBond® Hardwood Plywood
- 1 ¼-inch Pocket Screws
- 1 ¼-inch Wood Screws
- (1) Drop Down Hinge
- (1) Piano Hinge
- (1) Magnetic Clasp
- Wood Glue

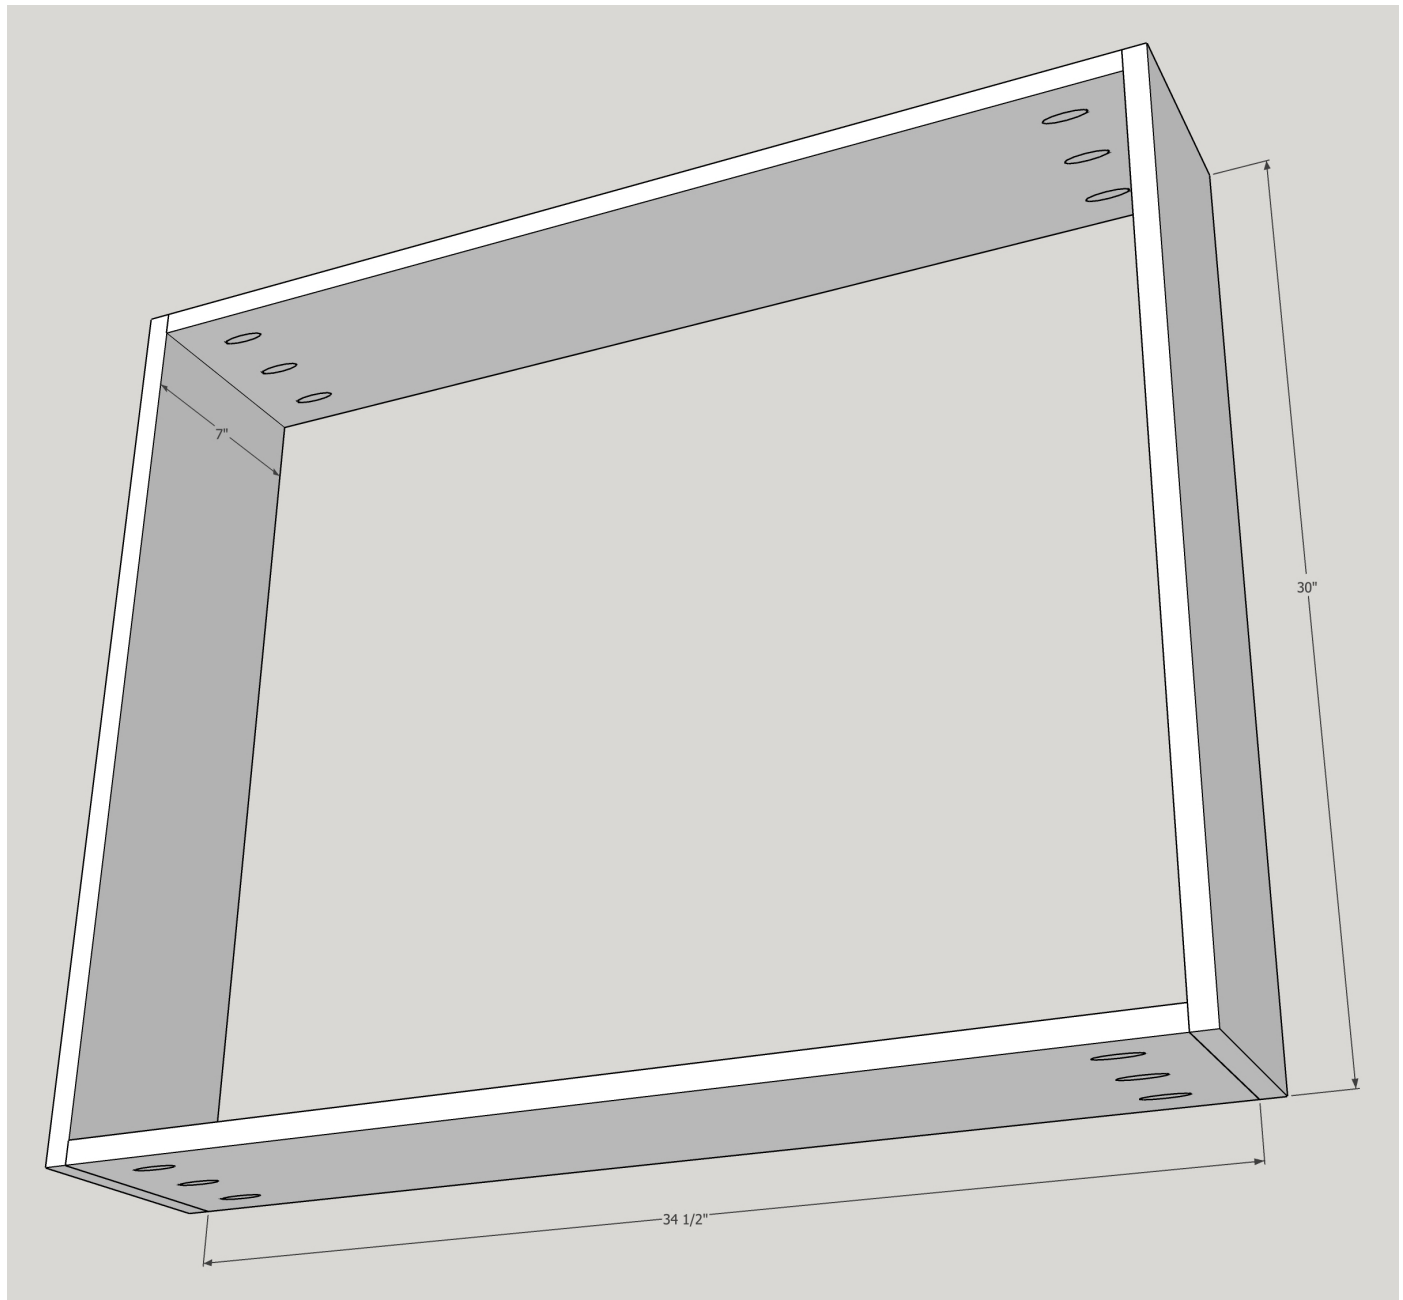
TOOLS:

- Tape Measure
- Pencil
- Carpenter's Square
- Cordless Drill/Driver
- Table Saw or Circular Saw
- Pocket Hole Jig
- Safety Glasses
- Hearing Protection
- Dust Mask

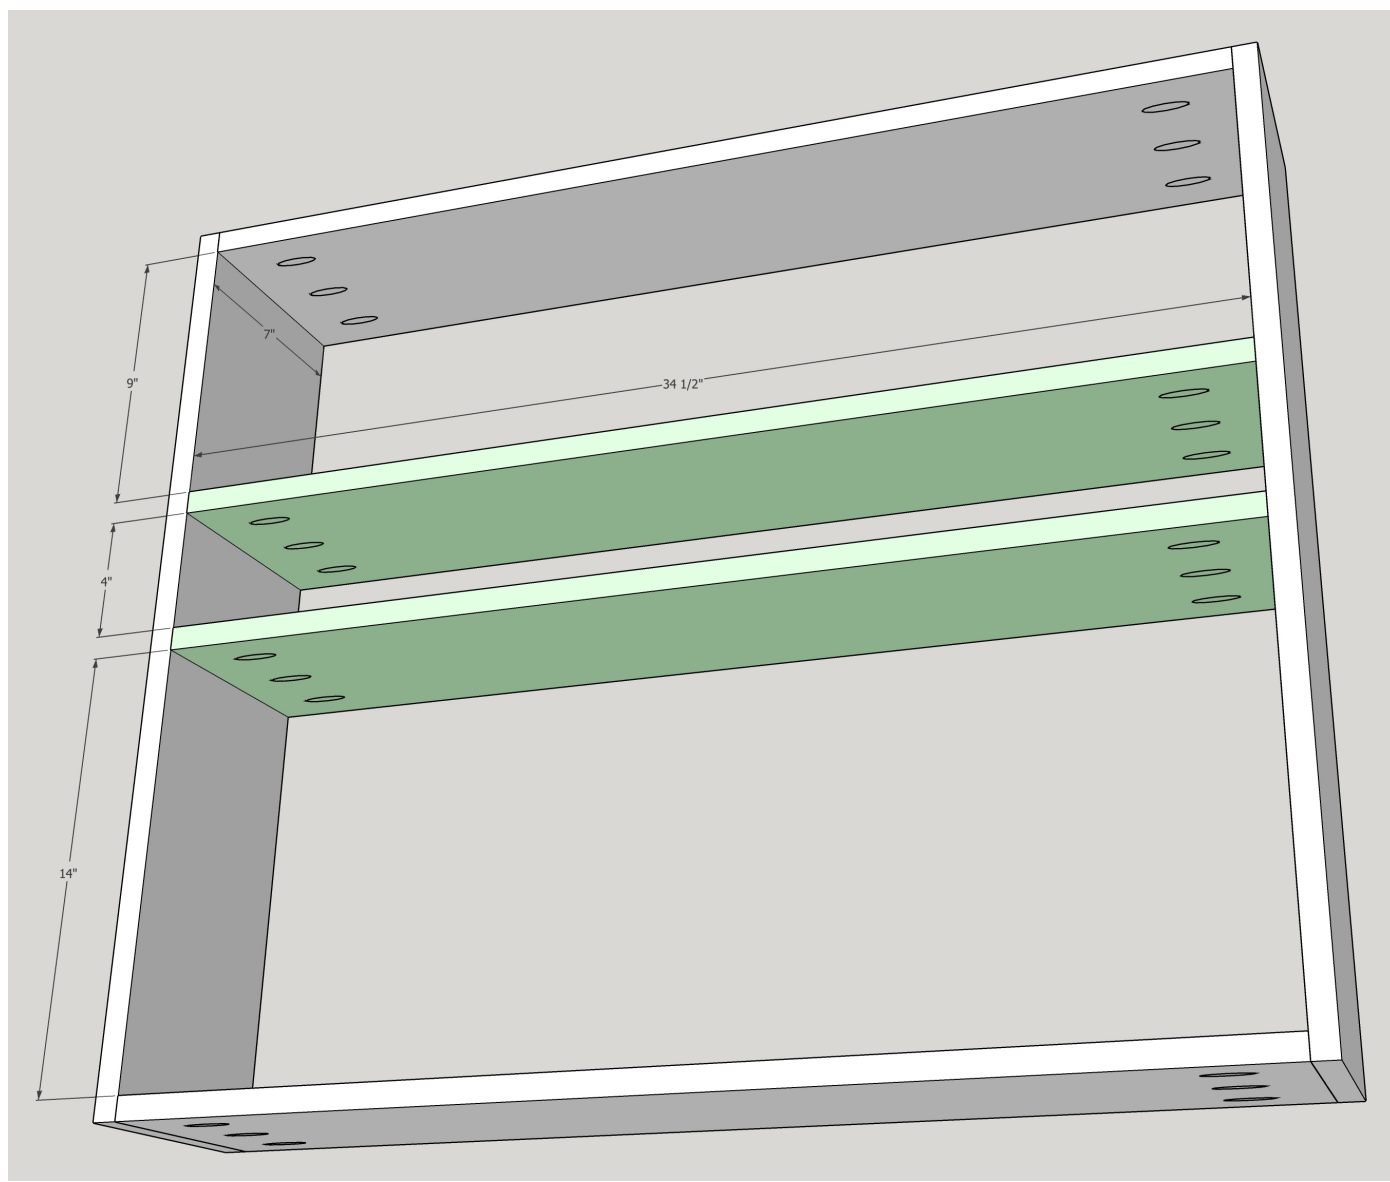


CUT LIST:

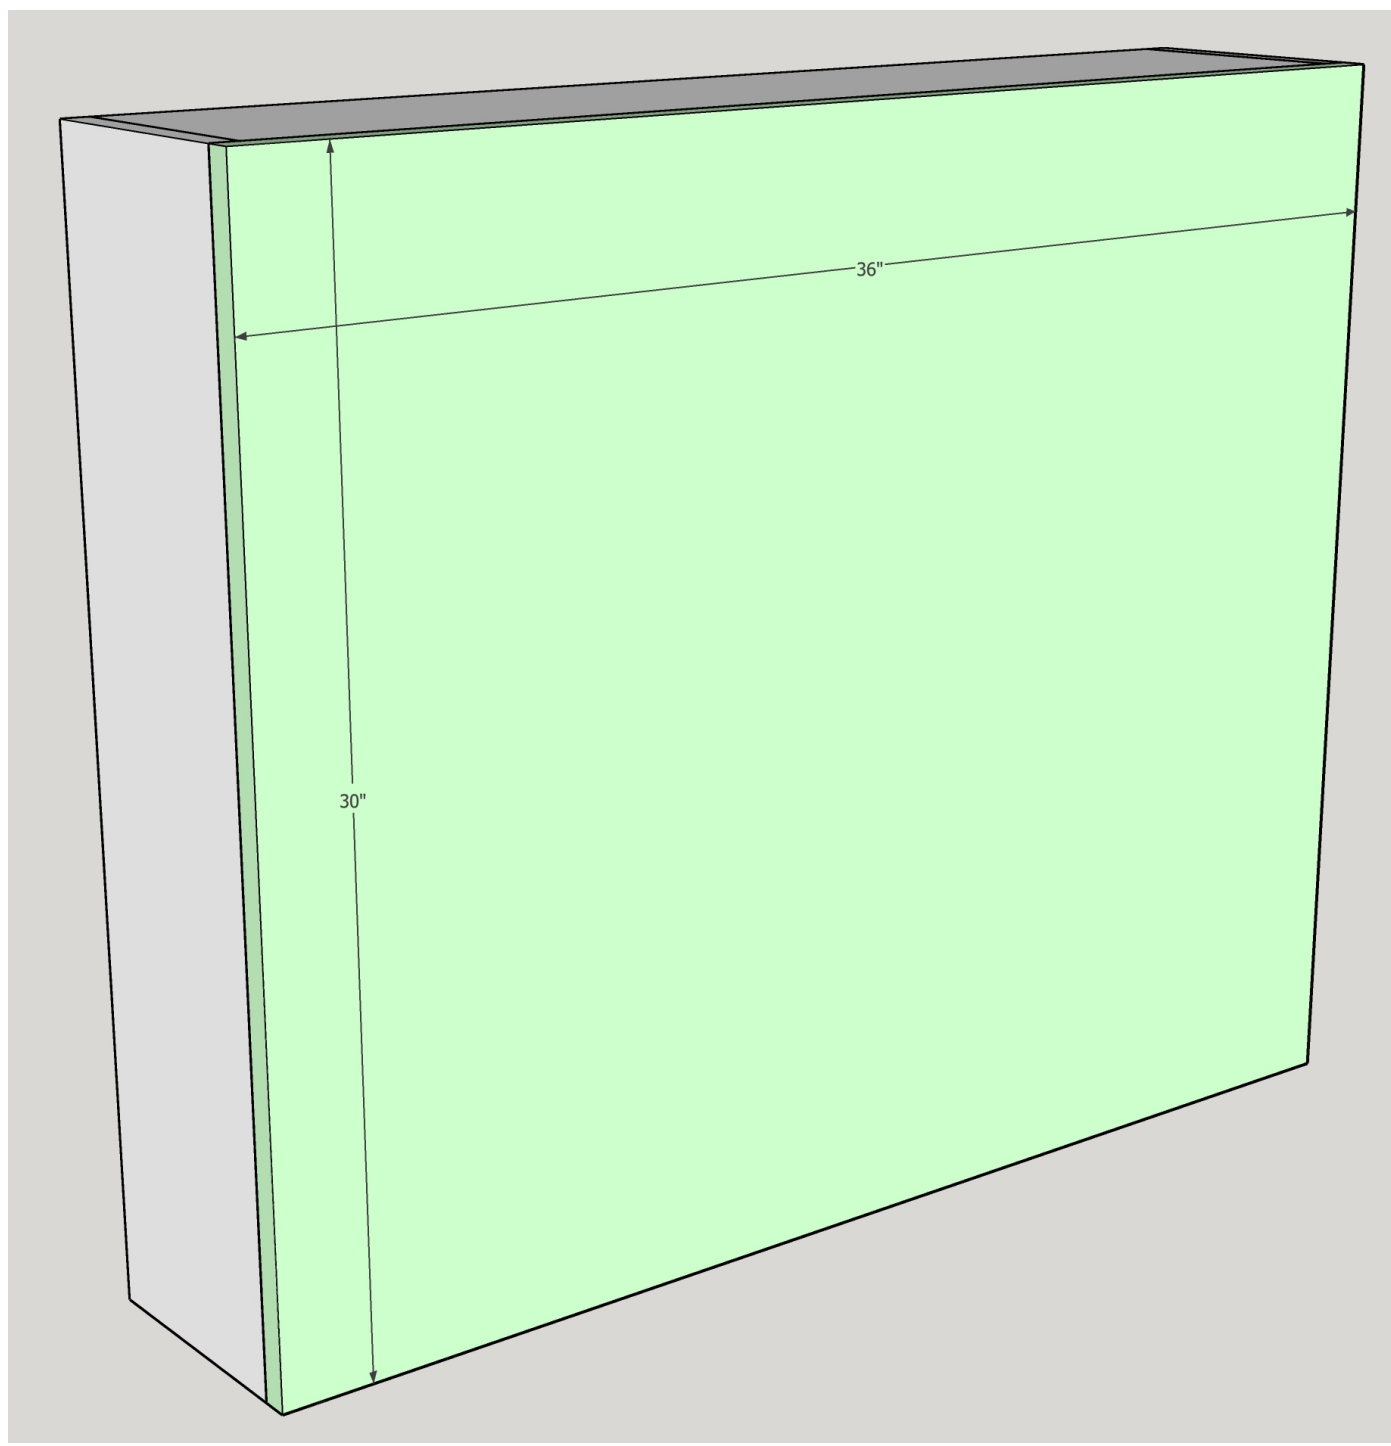
- (1) ¾-inch plywood @ 36 inches x 30 inches (back)
- (1) ¾-inch plywood @ 36 inches x 15 ½ inches (front)
- (4) ¾-inch plywood @ 34 ½ inches x 7 inches (top, bottom, shelves)
- (2) ¾-inch plywood @ 30 inches x 7 inches (sides)

**STEP 1 – CONSTRUCT THE BOX**

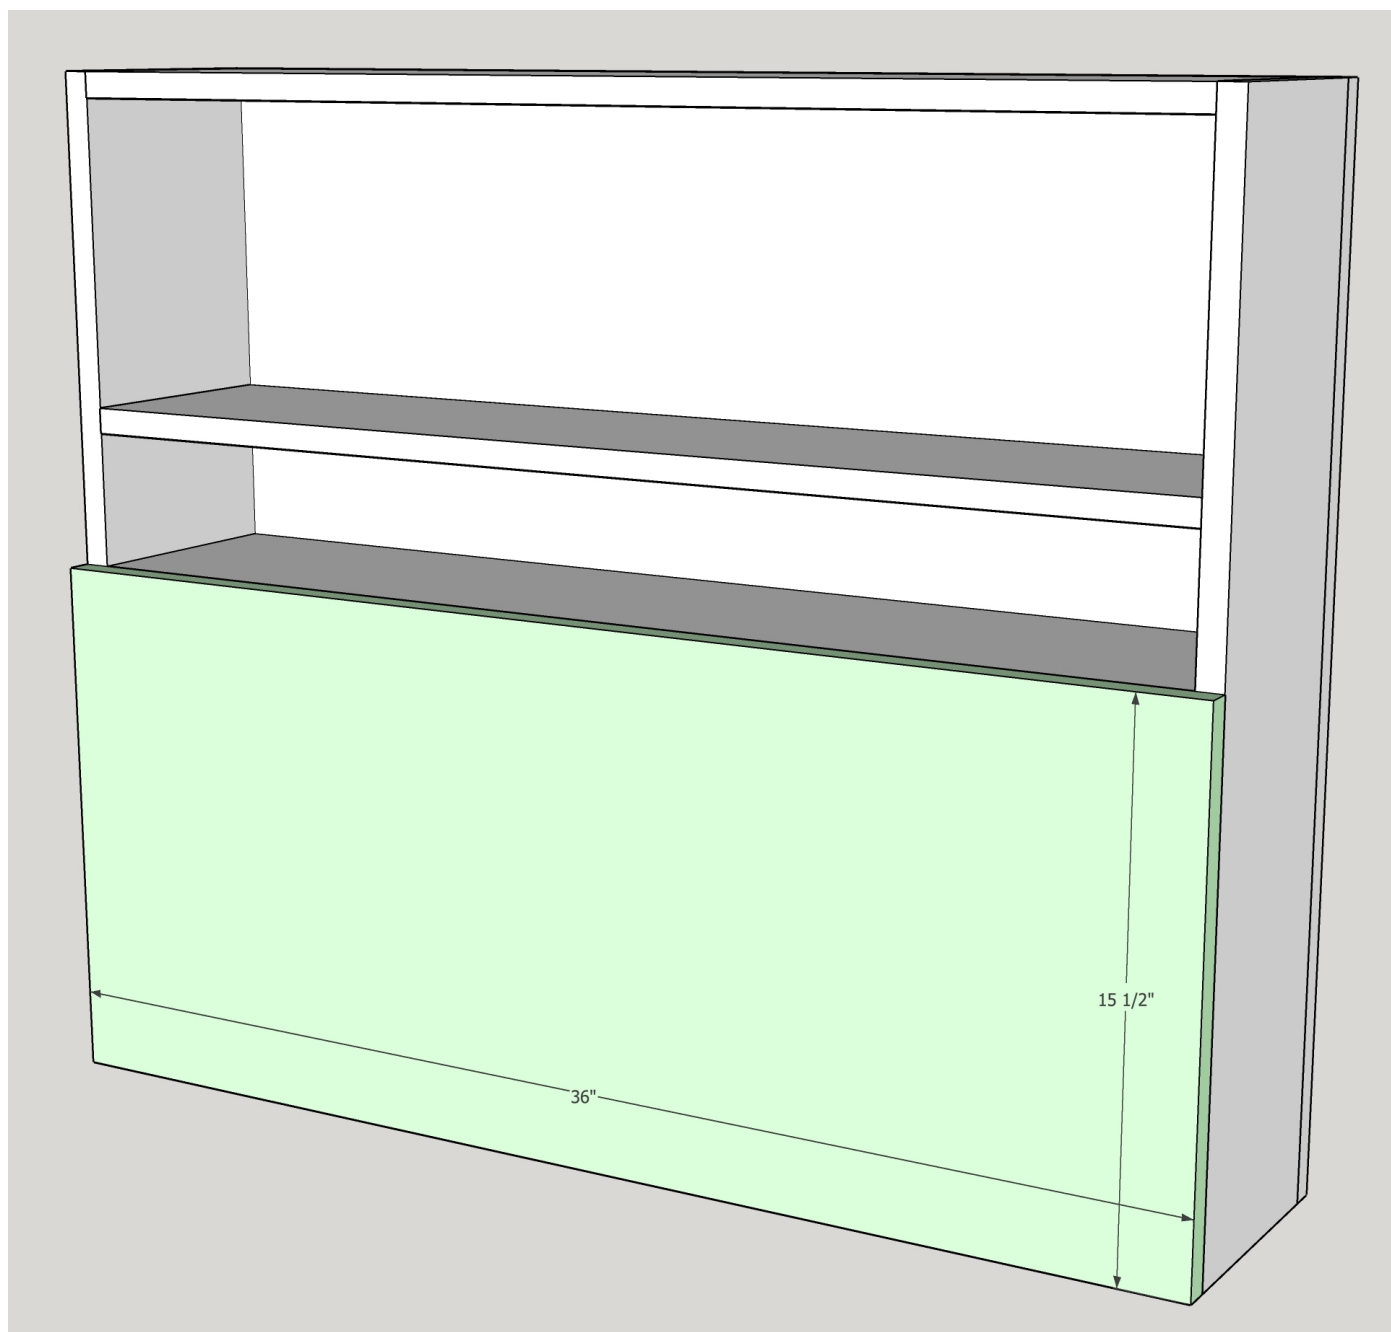
Measure, mark, and cut sides, top, and bottom boards to size. Drill ¾-inch pocket holes into the top and bottom boards as shown. Construct the box with 1 ¼-inch pocket screws and wood glue. Check for square and adjust as necessary.

**STEP 2 – ADD THE SHELVES**

Measure, mark, and cut shelves to size. Drill $\frac{3}{4}$ -inch pocket holes into ends and attach as shown with 1 $\frac{1}{4}$ -inch pocket screws and wood glue.

**STEP 3 – ATTACH THE BACK**

Measure, mark, and cut back panel to size. Pre-drill pilot holes and attach back to cabinet with 1 ¼-inch wood screws and wood glue.

**STEP 4 – ADD THE FRONT COVER**

Measure, mark, and cut front panel to size. Install hinges according to manufacturer's directions.

Sand, stain and/or paint, and finish as desired. To hang, screw the cabinet to the studs in the wall.